## WineZone 6000a Ductless Split Specifications

Condenser:					
<u>Voltage</u>	<u>Ampacity</u>	Max. Fuse	Min. Wire Size	RLA/LRA	<u>dB</u>
230/208-60-1	8.7	15	12-2 w/Gr	6.5/35	53

- 5/16" x 5/8" line set up to 50 equivalent feet. See the installation instructions for line set sizing up to 200 equivalent feet maximum.
- > Unit is not precharged and must be evacuated.
- ➢ For use with R-134a refrigerant.
- Indoor condensers must be installed in a room with a minimum of 4300 cubic feet of free space.
- ➢ <u>Dimensions</u>:

Indoor Unit: 25" L x 20" W x 18 1/2"T	100 lbs.
Outdoor Unit: 25 1/2" L x 20" W x 20"T	126 lbs.

Wall Mounted Evaporator:

Voltage	Motor Output	Filter	<u>dB</u>
208/240-60-1	38 Watts	Washable	42


- Receives load voltage from condenser
- Drain line is 5/8" barbed
- Dimensions: 40 11/16" W x 12 5/16" H x 8" D 30 lbs.

Thermostat:

- ▶ Honeywell FocusPRO5000 or Peco 12532 if ordered with humidifier
- ▶ 18-gauge 5-wire to the condenser

Approximate Shipping Weight: 275-323 lbs.

Crate Size: 36" x 49" x 44" T

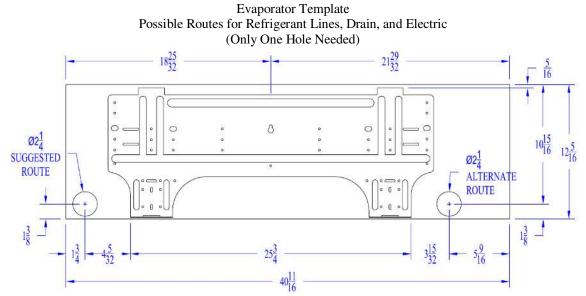

The holes shown are the best locations to route the refrigerant lines, condensate drain, and electric. For installations where the line set will be accessible on the backside of the wall, use the alternate route. When the line set will be run inside the wall before the drywall is installed, use the suggested route. This will leave the flare connections exposed so they can be connected after the walls are finished.